


# ENGINE WARRANTY & DRIVING

User Manual

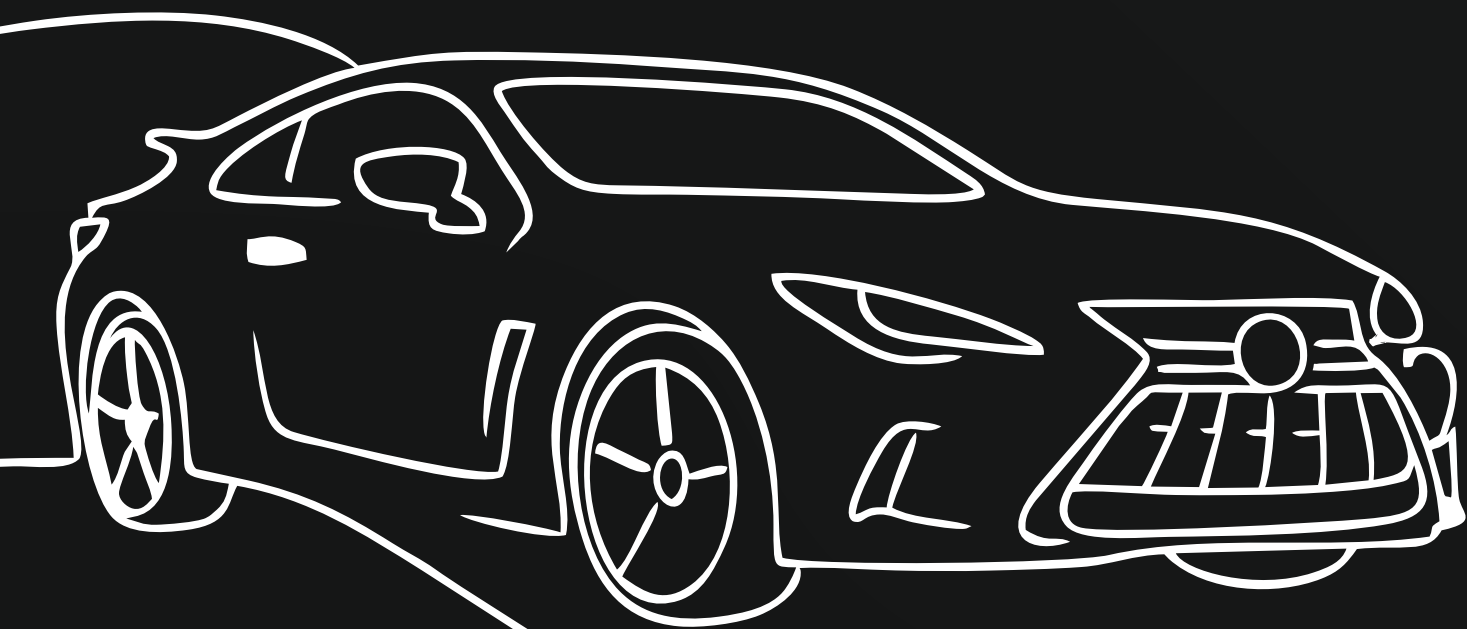

*Please keep this manual for future  
reference on driving and maintenance tips.*

# About This Manual

Car Model/Year: 2012 Ford F150  
Engine to Be Swapped with: 2019 Ford F150

The Purpose of this manual is to help you make the engine swap easy for you. It's easy to read & have detailed steps, which leaves nothing behind. If you are passionate about car's and want to deal with problems yourself, then it's for you. We hope you use this manual to tackle the engine installation problem yourself.

## Using the Manual

This manual is divide in to sections with clear pointers. Each section has been numbered individually. It means you don't have to follow the number list across sections. If you are in one section, its numbered list ends with the section

## Tools Needed:

- ◆ Engine hoist or crane
- ◆ Socket set
- ◆ Wrenches and ratchets
- ◆ Torque wrench
- ◆ Fluid catch pans
- ◆ Engine lifting straps
- ◆ Electrical connector tools
- ◆ Engine stand
- ◆ Screwdrivers (Flathead and Phillips)
- ◆ Jack stands and hydraulic floor jack
- ◆ Creeper for undercar work
- ◆ Diagnostic scan tool (for ECU resetting and calibration)





# 1. SAFETY & PRELIMINARY SETUP

## 1.1 General Safety

- ✦ The shop or compound in which you are working should be properly ventilated. And there should be enough light so that every part is clearly visible.
- ✦ Protective gear like gloves, steel toe boots, protective glasses should be worn.
- ✦ Disconnect the negative battery cable before any service.

## 1.2 Vehicle Support

- ✦ Position the truck on a flat surface; block rear wheels.
- ✦ Use a floor jack to raise front, set jack stands under frame rails.
- ✦ Chock wheels and verify solid support before work.



# 2. FLUID DRAIN & COMPONENT REMOVAL

## 2.1 Drain Fluids

- ✦ Every type of fluid should be drained next. Engine/transmission oil, any coolant, automatic transmission fluid, and power steering fluid should be drained completely.

## 2.2 Battery & Electrical

- ✦ Disconnect and remove the battery to clear the engine bay.
- Label and detach wiring harness connectors (ignition coils, sensors, fuel rail, starter).

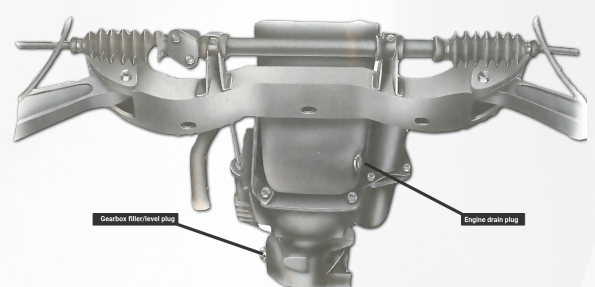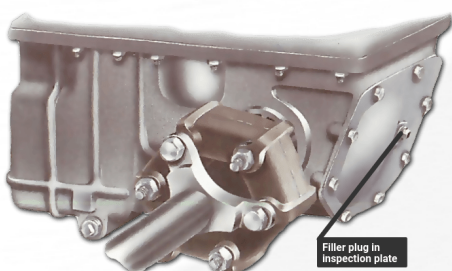

## 2.3 Accessory Removal

- ✦ The shop or compound in which you are working should be properly ventilated. And there should be enough light so that every part is clearly visible.
- ✦ Protective gear like gloves, steel toe boots, protective glasses should be worn.
- ✦ Disconnect the negative battery cable before any service.

## 3. ENGINE & TRANSMISSION DISASSOCIATION

### 3.1 Mount & Support


- ✦ Support transmission with a separate jack.
- ✦ Loosen engine mount bolts.

### 3.2 Bell Housing & Torque Converter

- ✦ Remove bell housing bolts and flexplate bolts (if engine will come off separately) or separate engine/transmission joint.

### 3.3 Hoist & Lift

- ✦ Rig engine hoist to factory lift points.
- ✦ Unbolt engine mounts, raise engine straight out to avoid chassis contact.

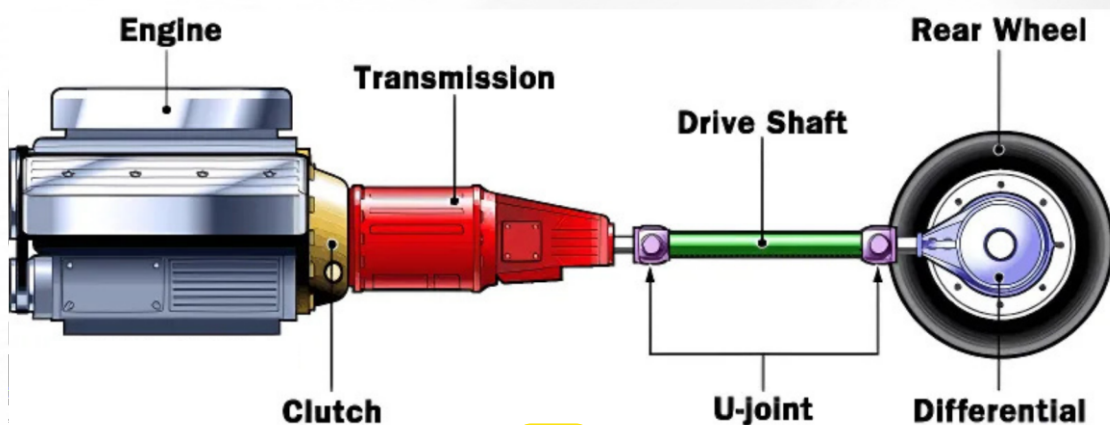



## 4. NEW ENGINE PREP

### 🎯 4.1 Inspection

- ✦ Check for leaks, damage.
- ✦ Perform compression or leak-down test.

### ↔ 4.2 Parts Transfer

- ✦ Move sensors, alternator, pump, brackets, engine mounts.
- ✦ Oil filter, water pump gasket, thermostat, spark plugs are all replaceable consumables. It's necessary to replace these, although small but they can hinder the working of the engine.

## 5. ENGINE INSTALLATION

### 🏠 5.1 Position & Align

- ✦ Lower engine into bay, align mounts and bell housing.

### 🔧 5.2 Torque Mounts & Bell Housing


- ✦ Torque engine-mount bolts to spec in the torque chart.

### ✂ 5.3 Reattach Accessories

- ✦ Parts like alternator, A/C compressor, intake, throttle body, radiator, hoses and serpentine belt, should be reinstalled next.

### 🔌 5.4 Electrical & Sensors

- ✦ Reconnect all wiring harnesses, sensors, starter.

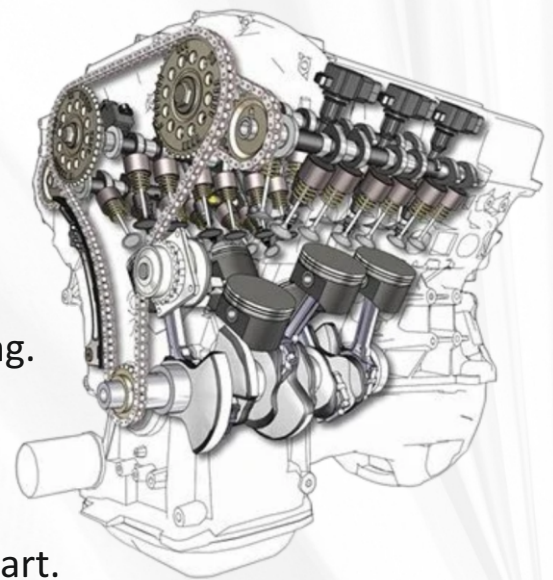

## 6. FLUIDS & ECU

### 6.1 Refill Fluids

- ✦ Each type of fluid should be filled ageing. Be it engine oil, transmission fluid, or coolant, every type of fluid is needed for proper functioning of the engine.
- ✦ Fluid levels should be adequate, no less or more than what needed.
- ✦ And lastly, check for any leaks again.

### 6.2 ECU Reset & Calibration

- ✦ Use Fords official OEM scan tool to diagnose
- ✦ Erase the code and clear error messages from the ECU.
- ✦ Engine idle control system should be reset again.
- ✦ Recalibration of transmission shift is necessary for smooth shifting.

## 7. FINAL INSPECTION & ROAD TEST

### 7.1 Pre-Start Checks

- ✦ Visual check of hoses, connectors, loose tools.

### 7.2 Initial Start-Up

- ✦ Crank engine to build oil pressure, check for leaks. Inspect serpentine belt alignment and fan operation.

### 7.3 Road Test

- ✦ Warm engine gradually, monitor for noise, vibration, overheating. Check transmission performance, shift quality, drivability.



# TORQUE SPECIFICATIONS

- ◆ These specs are critical to know. The bolts cannot be torqued randomly.
1. If the bolt is under torqued, it can be loosened. This can lead to a series of engine failures.
  2. If the bolt is over torqued, the excessive strain can make it snap. This can land you in another world of problems.

**Note:-** Nm/ ft.lb represent Newton Meter and Feet per Pound. These units help you decide the magnitude of force by which it should be torqued. You can decide the amount of force by simply using a Torque Angle Gauge.

Component	Stage 1 (Torque)
Cylinder head bolts (V8/4.6L & 5.4L)	Stage 1: 20 Nm (15 ft·lb) Stage 2: 40 Nm (30 ft·lb) Stage 3: 50 Nm (37 ft·lb) Stage 4: +180°
Main bearing cap bolts	50 Nm (37 ft·lb) + 120° angle
Connecting rod bolts	Stage 1: 25 Nm (18 ft·lb) Stage 2: 45 Nm (33 ft·lb) Stage 3: +90–120°
Flex plate bolts	80 Nm (59 ft·lb)
Crankshaft pulley bolt	160 Nm (~118 ft·lb)
Exhaust manifold nuts	25 Nm (18 ft·lb)
Water pump bolts	25 Nm (18 ft·lb)
Oil pump bolts (4)	25 Nm (18 ft·lb)
Oil pan bolts	10 Nm + 45° (~89 in·lb + 45°)
Timing cover bolts	25 Nm + 60° (~18 ft·lb + 60°)
Camshaft bearing cap bolts	6 Nm + 45° (~53 in·lb + 45°)

**Important:** Use new head bolts. Stage bolts should be Tightened/Torqued in correct numeric sequence.

## BEST PRACTICES TO FOLLOW

- ⚡ A torque wrench can only work correctly if it's calibrated in accordance with engine.
- ⚡ It is recommended by Ford Corporation that fasteners should be replaced
- ⚡ Threads of bolts should be properly lubricated with suitable oil only
- ⚡ Perform torque in correct sequence, not randomly.
- ⚡ Factory method: torque → angle-step tightening ensures clamping accuracy.
- ⚡ Fords torque procedure is to be followed if, bolt is marked as 'Torque to Yield'



# *Thank You*

[www.carpartsstoreusa.com](http://www.carpartsstoreusa.com)



✉ [info@carpartsstoreusa.com](mailto:info@carpartsstoreusa.com)

**Fast, Reliable & Quality**  
**Auto Parts Delivered Nationwide**



# WARRANTY & GENERAL UTILITY USER MANUAL

REFER THIS USER MANUAL FOR  
ANY MAINTENANCE OR DRIVING  
TIPS, IF YOU ARE UNABLE TO  
REACH US



Need Any Help?  
Scan the QR code or  
visit: [carpartsstoreusa.com](http://carpartsstoreusa.com)